


GF Model Floor Cover

Installation Instructions

F Model Floor Cover - The following installation instructions are very important. Read them carefully, and be sure you understand them completely, before you begin any work. Refer to Balco shop drawings for placement dimensions and anchor spacing.

Parts:


A. Cover Plate B. Gasket C. Anchors

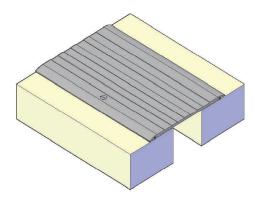

Step 1: Attach the Gasket

If the gasket was not attached to the cover plate at the factory, do so at this time. Trim the gasket section to match the length of the cover plate. Insert (1) gasket into each of the channels on the bottom of the cover plate.

♦ The cover plate for the GF-1P does not have channels for gasket installation. Gaskets are not used with the GF-1S model.






Step 3: Drill Substrate Anchor Locations (Required for Masonry / Concrete Installations Only)

Place the expansion joint cover into its installed position on the floor. Using the factory drilled cover plate as a template, mark and drill the anchor holes on the floor. Anchor holes should be drilled 1/4" deeper than the length of the anchor.

• Reference Balco approved shop drawings for anchor placement dimensions.

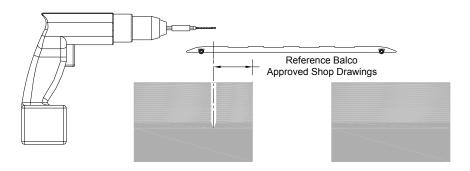

Step 4: Attach the Cover Plate to the Floor

Using the factory provided flat head anchors, attach the cover plate to the floor.

• Repeat Steps 1 thru 4 for each subsequent section of cover plate

